

PLAYER GUIDE // FORTNITE CONTROL

FORTNITE PRO COMMAND GUIDE

Use the documented runtime controls for rapid fire, movement, and supported Fortnite layouts. In-game updates and remapped controls can change behavior.

• HARDWARE SIGNAL VERIFIED



CONFIRM YOUR CONTROLLER

01

Complete PS5 controller customized by Silent Modz.

02

Four rear controls and layout programming are included.

03

D-pad Up is the feature-access control used on these commands.

QUICK START // BUTTON MAP



RAPID FIRE



JUMP

TAP TWICE: BURST



CROUCH

RUNTIME COMMANDS // COMBAT

Fire and movement controls

Use the base commands during play. Confirmation behavior can vary by controller revision.

01 // RAPID FIRE

Repeat the R2 fire input

Tap once to enable the documented rapid-fire mode for compatible weapons.



TAP ONCE

02 // THREE-ROUND BURST

Three shots per trigger pull

Tap the same command twice to select the burst behavior.



TAP TWICE

03 // CROUCH

Repeat the R3 input

Use only when the active Fortnite layout maps crouch to R3.



TOGGLE

04 // JUMP

Choose one of two jump behaviors

Tap once to pause jumping while aiming down sights. Tap twice to continue jumping while aiming.



ONCE / TWICE

RUNTIME COMMANDS // SUPPORT

Auto Run and Aim Assist input

These commands reproduce controller inputs; they cannot override Fortnite settings, updates, or server rules.

05 // AUTO RUN

Sustain the L3 movement input

Toggle the documented run behavior. Results depend on movement and sprint settings.



TOGGLE

06 // AIM ASSIST INPUT

Repeat the L2 input

This feature only repeats the documented input. Effectiveness depends on the current Fortnite version, controller settings, and layout.



TOGGLE

07 // CROUCH OR JUMP

Select one movement loop

The source system treats Crouch and Jump as mutually exclusive; enabling one disables the other.

- Confirm R3 still means crouch before use.
- Retest after major game updates.

REAR CONTROL // REFLEX MAP

Map and tune the four rear controls

Program each rear control independently. The confirmation flash indicates that the mapping was received.

08 // MAP A REAR CONTROL

Hold, choose, release

Hold the rear Reflex control, tap one or more supported face/shoulder controls, then release the rear control.

- A fast confirmation flash stores the mapping.



HOLD / RELEASE

09 // REAR TURBO

Choose one of four rates

Hold D-pad Down and tap the rear control. Repeat to cycle the documented rate.

- 1 flash: off
- 2 flashes: 5 SPS
- 3 flashes: 10 SPS / 4 flashes: 15 SPS



CYCLE RATE

10 // CENTRAL REAR BUTTON

No customer function documented

The source identifies the central rear setup button but assigns no customer command to it. Do not force or remap it.

LAYOUT COMMAND // PROGRAMMING

Select a Fortnite control profile

Enter programming, choose the layout, toggle the desired functions, then exit with L3.

11 // ENTER PROGRAMMING

Hold all four shoulder controls

Hold for 8 seconds until the controller confirms programming mode.



HOLD 8 SEC

12 // CYCLE LAYOUT

Move through four stored profiles

Press D-pad Up to cycle Builder Pro, Combat Pro, Quick Builder, and Old School.



NEXT LAYOUT

13 // SAVE AND EXIT

Close programming mode

Press L3 after selecting the layout and feature toggles you want.



SAVE / EXIT

14 // MASTER RESET

Restore documented mod settings

Turn the controller off. Hold X + Triangle + Circle + Square while powering on; keep holding through 10 fast flashes.



POWER ON



LAYOUT MATRIX // PROGRAMMING

Profiles, build pieces, and weapon slots

Use D-pad Up to choose a profile. The mappings below describe the source layout assignments.

BUILDER PRO	D-pad Up cycle	Stored profile 1
COMBAT PRO	D-pad Up cycle	Stored profile 2
QUICK BUILDER	D-pad Up cycle	Stored profile 3
OLD SCHOOL	D-pad Up cycle	Stored profile 4
FLOOR	R1	Build-piece assignment
WALL	R2	Build-piece assignment
ROOF	L1	Build-piece assignment
RAMP	L2	Build-piece assignment
FIRST WEAPON	D-pad Up	Weapon-slot assignment
LAST WEAPON	D-pad Down	Weapon-slot assignment



FEATURE MATRIX // PROGRAMMING

Toggle features inside programming mode

Enter programming first, press the listed control to toggle the feature, then press L3 to save and exit.

RAPID FIRE

Triangle

Toggle the R2 rapid-fire function

JUMP

X

Toggle the jump loop

CROUCH

Circle

Toggle the crouch loop

AUTO AIM

Square

Toggle the documented repeated-input behavior

AUTO RUN

R3

Toggle the run behavior

SAVE / EXIT

L3

Store settings and leave programming

COMPATIBILITY

Verify layout

Retest after Fortnite updates or remapping

CONFIRMATION

Watch flashes

Source pages conflict on flash color; use the flash event, not a promised color