

PLAYER GUIDE // PS5

LED CONTROLLER COMMAND GUIDE

Power the glow, cycle seven colors, and save the mode that matches your setup.



01 // LED POWER

Turn LEDs on or off

Hold all three controls together for 7 seconds. Use the same command to turn the LEDs back on.



SQUARE



D-PAD RIGHT



D-PAD UP

BUTTON LOCATION



02 // COLOR PROGRAM

Enter or save color mode

Hold the two controls together for 7 seconds. Enter when the LEDs begin blinking; repeat to save and exit.



SQUARE



D-PAD UP


BUTTON LOCATION



AVAILABLE SIGNALS




RED

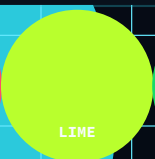

LIME




GREEN

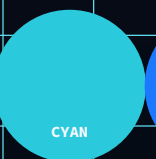

CYAN



BLUE

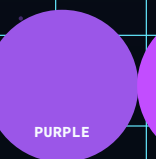

PURPLE



VIOLET

SLOW BLINK

FAST BLINK



COLOR MODE SEQUENCE

CHOOSE THE COLOR. LOCK THE SIGNAL.

Complete the sequence in order. A full 7-second hold is required at the first and final steps.

01 Enter program mode

Hold Square and D-pad Up for 7 seconds. Release when the LEDs begin blinking.

  SQUARE + D-PAD UP

02 Select your mode

Tap D-pad Right to move through the available colors and lighting effects.

 TAP D-PAD RIGHT

03 Save and exit

Hold Square and D-pad Up again for 7 seconds to keep the selected mode.

  SQUARE + D-PAD UP

QUICK CHECK

Find the buttons first

- 01 Square is the left face button in the four-button cluster.
- 02 D-pad Up is the top direction; D-pad Right is the right direction.
- 03 Press the full combination together and hold for all 7 seconds.

BUTTON LOCATION



NEED A HAND?

Send us your order number and controller version.

[SILENTMODZ.COM/CUSTOMER-HELP](https://www.silentmodz.com/customer-help)