

PLAYER GUIDE // PS5 PRO COMPETITION

PADDLE REMAP COMMAND GUIDE

For Silent Modz Pro Competition PS5 controllers with two or four remappable rear paddles. Program only the paddles physically installed on your controller.



01 // COMMAND

Enter

Hold rear-center program button 5 seconds.

SOLID RED



02 // COMMAND

Map

Hold input + rear paddle together 3 seconds.

3 FAST FLASHES



03 // COMMAND

Exit

Hold rear-center program button 5 seconds.

LIGHT OFF



MODEL BOUNDARY

Use This Guide Only for Rear-Paddle Remapping

- This guide does not cover Rapid Fire, a dedicated mod button, LEDs, macros, profiles, Click Triggers, or DualSense Edge controls.
- Pro Competition is the Silent Modz product-family name. It is not a claim of tournament approval.
- Always exit Programming Mode when you finish.

CONTROL MAP // FIND THE HARDWARE

Front Input. Rear Paddle.

The control map marks the supported input areas in red. Match one supported front input to one physical rear paddle.



SUPPORTED INPUT MAP // RED MARKS IDENTIFY AVAILABLE INPUT AREAS

REAR CONTROL

Programming Button



Use the small rear-center programming button shown here. It is not the PS button or touchpad.

SUPPORTED INPUTS

Use Only What Is Shown

- D-pad directions and the four face buttons are visibly marked.
- The source also circles both stick-click areas and the shoulder/trigger areas without naming each one.
- Do not assume touchpad, PS, Create, Options, stick movement, macros, or multi-input mappings.

TWO OR FOUR PADDLES

The Sequence Is the Same

Collection titles identify two-paddle and four-paddle builds. Repeat the mapping sequence separately for each installed paddle you want to use. Paddle position names are not assigned in this guide.

PROGRAMMING MODE // START AND FINISH

Red Means Ready.

Use the same rear-center button to enter and exit. The indicator state tells you when the remap system is ready.

REAR-CENTER
PROGRAM BUTTON

STEP 01 // ENTER

Hold for 5 Seconds

Hold the rear-center programming button until the indicator turns solid red. The remap system is now in Programming Mode.



ENTER

STEP 03 // EXIT

Hold for 5 Seconds

After mapping, clearing, or resetting, hold the same button until the indicator turns off. Normal play resumes after exit.



EXIT

DO NOT SKIP THE EXIT STEP

A solid red indicator means Programming Mode is still active. Hold the rear-center button for 5 seconds and confirm the light turns off before returning to a game.


PADDLE COMMAND // ONE MAPPING AT A TIME

Hold Both Together.

Programming Mode must already be active and the indicator must be solid red before you begin either sequence.

STORE A MAPPING

Supported Input + Rear Paddle

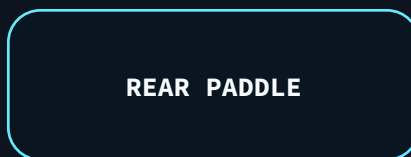

HOLD BOTH

Choose one supported controller input and the rear paddle that should mirror it. Hold both together for 3 seconds.

3 FAST RED FLASHES = MAPPING STORED

CLEAR ONE MAPPING

Repeat the Same Pair

To clear a paddle mapping, repeat the same 3-second hold using that paddle and its currently assigned input. Three slow red flashes indicate that the mapping was removed.



CLEAR

3 SLOW RED FLASHES = MAPPING CLEARED

CONFIRM BEFORE PLAY

Test, Then Exit

- Repeat separately for each installed paddle you want to configure.
- If the feedback pattern differs, stop. Do not guess another command sequence.
- When finished, hold the rear-center button 5 seconds until the indicator turns off.

RECOVERY COMMAND // PADDLE MAPPINGS

Reset the Remap System.

Use this only when you want to clear the rear-paddle mapping configuration. It is not a full controller or console factory reset.

WHILE PROGRAMMING MODE IS ACTIVE

Hold All Six for 5 Seconds



3 SLOW RED FLASHES = REMAP RESET COMPLETE



RESET CHECKLIST

Finish the Sequence

- Enter Programming Mode first; solid red indicator.
- Hold all six controls together for 5 seconds.
- Wait for three slow red flashes.
- Exit Programming Mode: hold rear-center button 5 seconds until off.

NO RESPONSE?

Stop and Verify

- Confirm the controller is the Pro Competition remap family.
- Confirm the rear indicator is solid red before mapping or resetting.
- Use one exact 3- or 5-second hold; do not rapidly repeat commands.
- Contact support with the product title and order number if feedback differs.

SILENT MODZ SUPPORT

Bring the Exact Controller Version

Open silentmodz.com/customer-help/ and include the product title, order number, paddle count, and the indicator pattern you see. Do not use a Rapid Fire, LED, mod-button, or Edge guide on this rear-paddle remap system.