

PLAYER GUIDE // XBOX

LED + PRO GRIP COMMAND GUIDE

Control the lighting and switch trigger travel without interrupting the game setup.



01 // LED COLOR

Change the LED color

Press View and Menu together at the same time to change the lighting color.



VIEW



MENU

BUTTON LOCATION



02 // LED POWER

Switch LEDs on or off

Hold the Menu button for 7 seconds. Use the same command to switch the LEDs back on.



HOLD MENU 7 SEC

BUTTON LOCATION



03 // TRIGGER TRAVEL

Choose normal or hair trigger

Move the side-rail switch down for normal trigger travel or up for hair-trigger mode.



DOWN = NORMAL



UP = HAIR TRIGGER

SIDE-RAIL SWITCH



DOWN
NORMAL



UP
HAIR

CONTROL MAP

LIGHT THE SHELL. SET THE TRIGGERS.

Use the face controls for lighting and the physical side-rail switch for trigger travel.

01 // CYCLE LED COLOR +

Press the View and Menu buttons together. Repeat the command to choose another



VIEW + MENU

02 // TOGGLE LED POWER +

Hold Menu for the full 7 seconds. Repeat the same hold to restore the lights.



HOLD MENU 7 SEC

03 // SET TRIGGER TRAVEL +

Flip the side-rail switch down for normal travel or up for hair-trigger mode.



DOWN NORMAL / UP HAIR

QUICK CHECK

Find View and Menu first

- 01 View is the small button left of center with two overlapping boxes.
- 02 Menu is the small button right of center with three horizontal lines.

AVAILABLE SIGNALS



BUTTON LOCATION



SLOW BLINK

FAST BLINK

NEED A HAND?

Send us your order number and controller version.

[SILENTMODZ.COM/CUSTOMER-HELP](https://silentmodz.com/customer-help)